




Manfrotto

INSTRUCTIONS

098 - 098SH

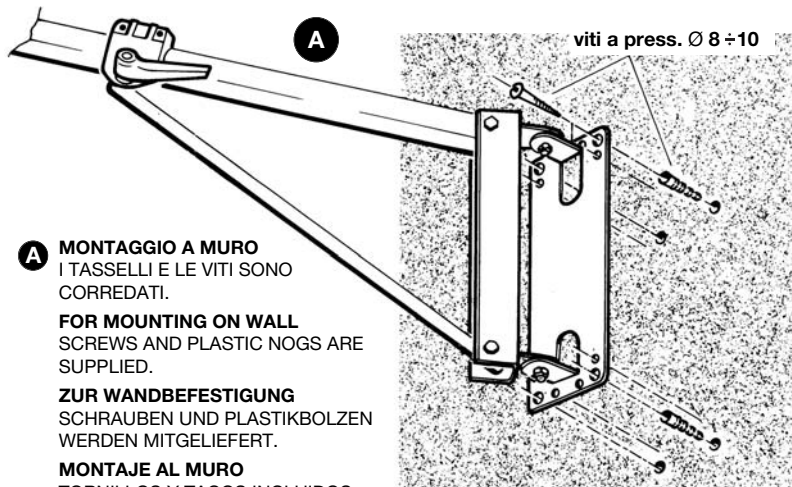


A MONTAGGIO A MURO
I TASSELLI E LE VITI SONO
CORREDATI.

FOR MOUNTING ON WALL
SCREWS AND PLASTIC NOGS ARE
SUPPLIED.

ZUR WANDBEFESTIGUNG
SCHRAUBEN UND PLASTIKBOLZEN
WERDEN MITGELIEFERT.

MONTAJE AL MURO
TORNILLOS Y TACOS INCLUIDOS
EN SUMINISTRO.

POUR MONTAGE SUR LE MUR
VIS ET CHEVILLES FOURNIES.

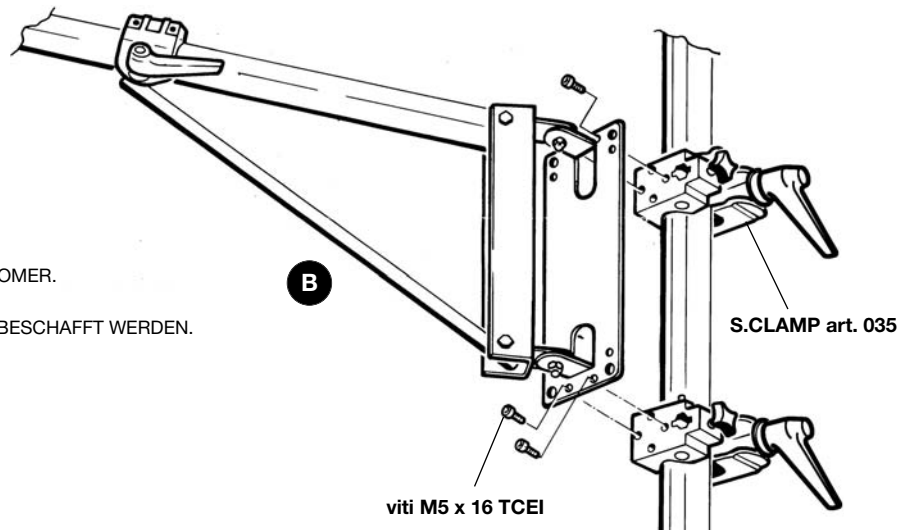

B MONTAGGIO SU SUPERCLAMP
VITI M5x16mm A CURA DEL CLIENTE.

FOR FITTING ON SUPERCLAMP
M5x16mm SCREWS SHOULD BE PROVIDED BY CUSTOMER.

ZUR BEFESTIGUNG AN SUPERCLAMP
SCHRAUBEN M5x16mm MUESSEN VOM ANWENDER BESCHAFFT WERDEN.

MONTAJE CON SUPERCLAMP
TORNILLOS M5x16mm POR CUENTA CLIENTE.

POUR FIXATION SUR SUPERCLAMP
VIS M5x16mm NON FOURNIES.